


# Schematic Symbols Used in Circuit Diagrams

Labelling conventions: # is a sequential number. (X#) is the component designator. Examples - C3, L11, R8, Q3

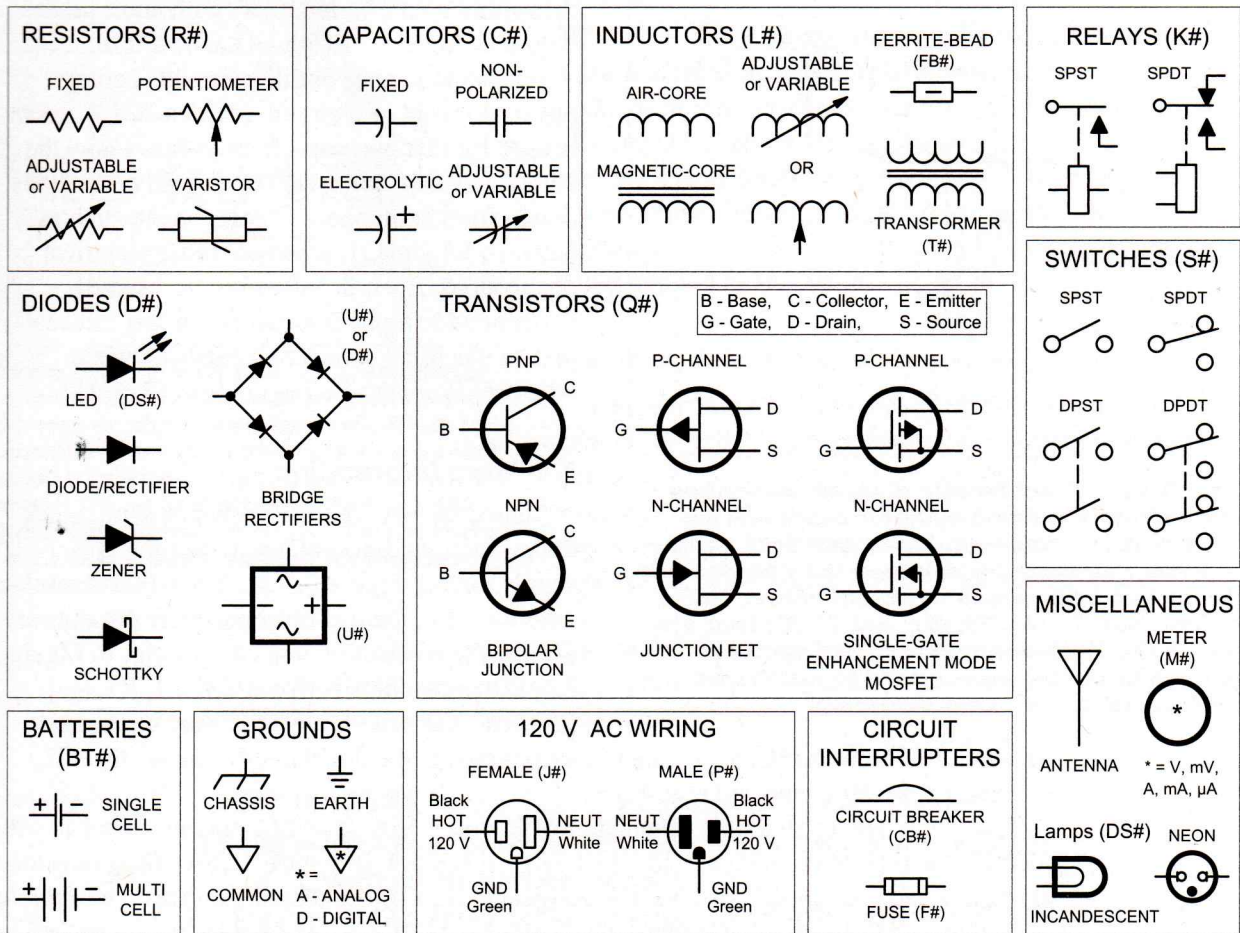

arrl\_symbols03

**Figure 3.15 — Symbols are used when drawing a circuit because there are so many types of components. Radio and electrical designers use them as a convenient way of describing a circuit.**